


# FD03 Scupper Roof Drain Detail

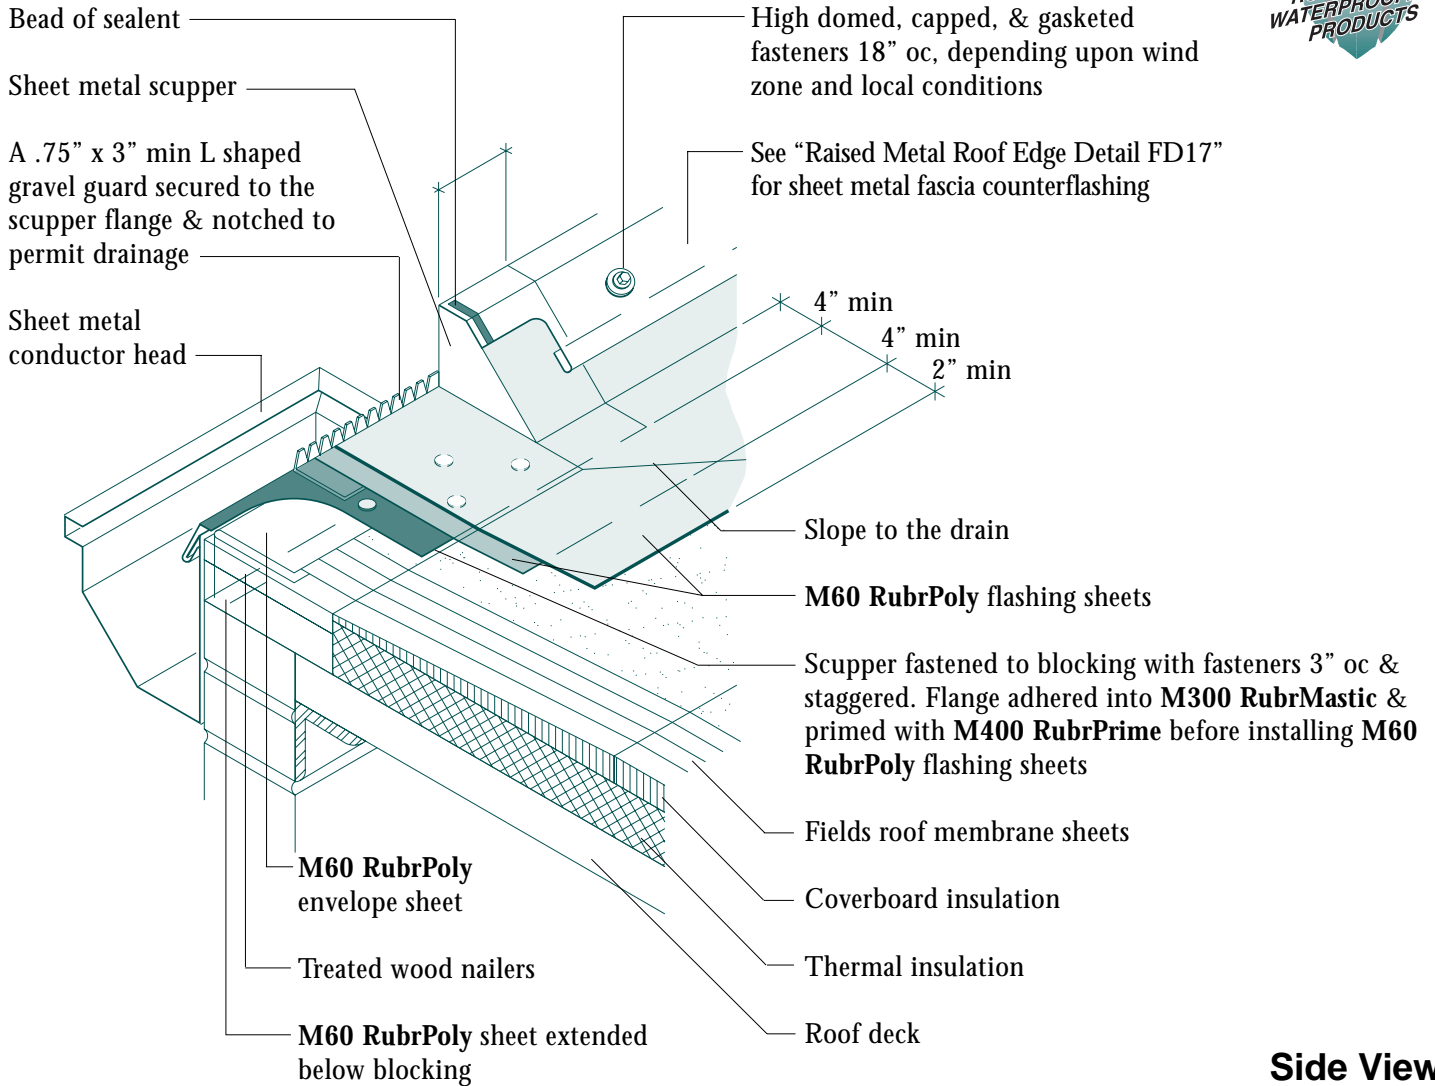

**Side View**

## Notes

1. This detail shall be installed only where the deck is supported by the outside wall.
2. This detail may be adapted to roof edges as shown in Interior Roof Drain Detail FD01.
3. Roof surfaces shall be sloped for positive drainage.
4. Attach wood nailer to wall with suitable fasteners.
5. Wood blocking shall be slotted for venting wet filled decks.
6. Scupper opening through roof edge shall be 2' or less.

