


# FD22 Metal Wall Cap Flashing Detail

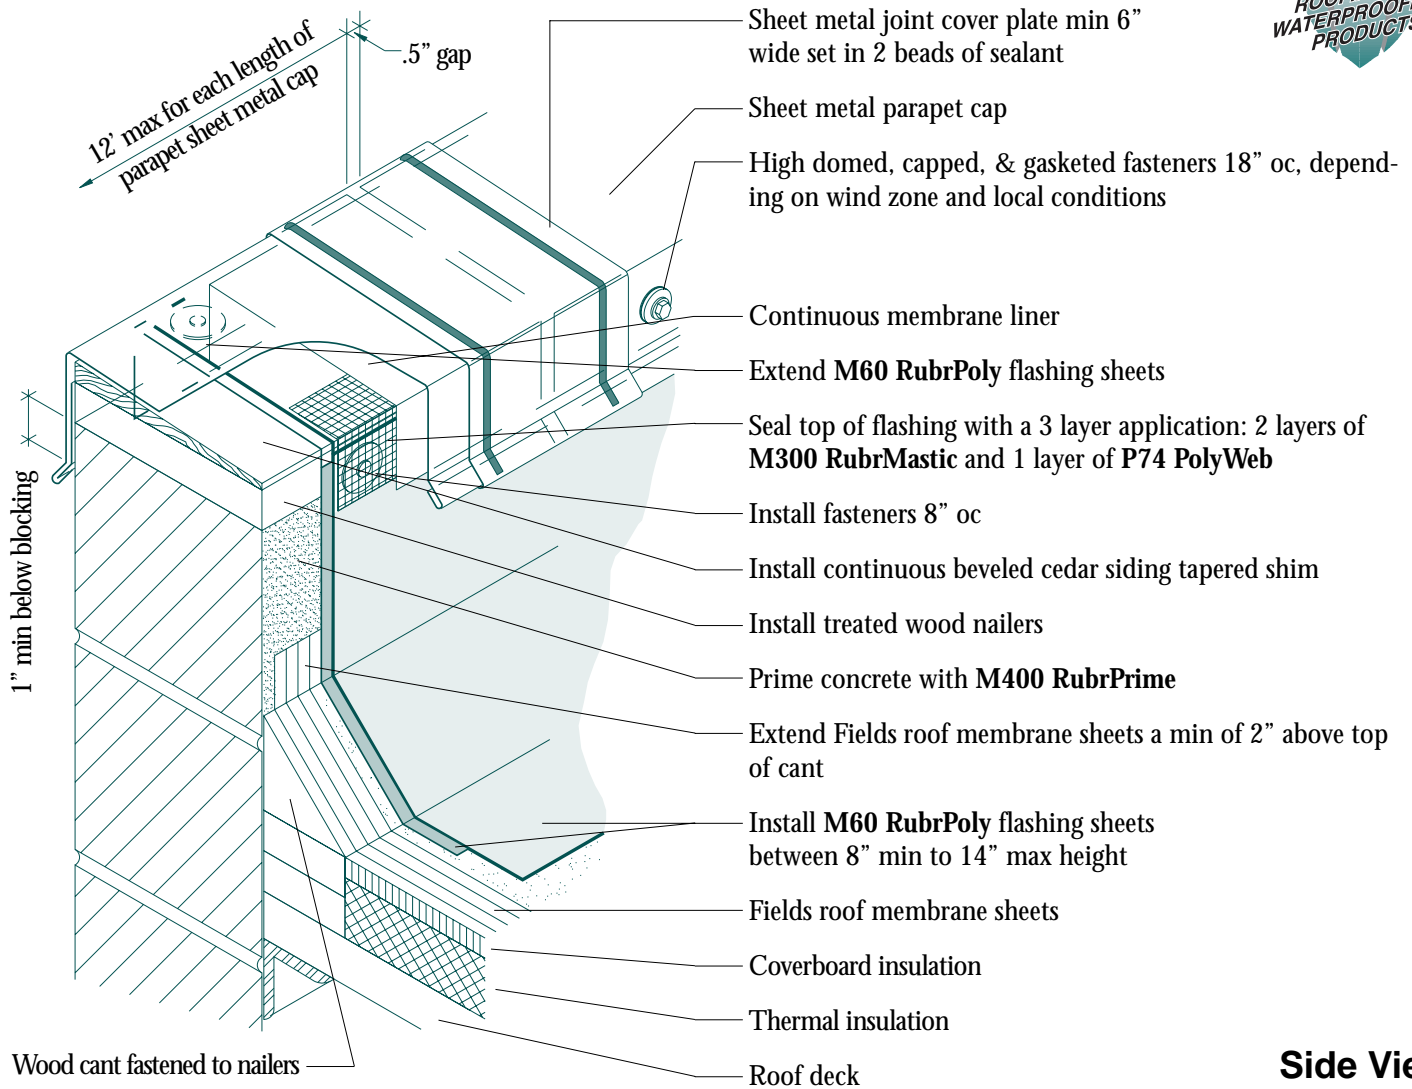

**Side View**

## Notes

1. This detail shall be installed when the roof deck is supported by the wall. See "Post Supported Roof Deck Flashing Detail FD19".
2. Attach treated wood nailer to deck with suitable fasteners.
3. A fiber cant may be adhered in ambient or hot asphalt in place of wood cants.

